


KR7820006245

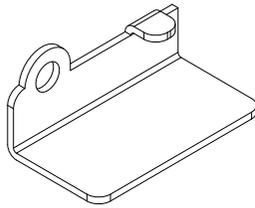


name	reference
up outdoor square 8,4W white	KR982101
up outdoor square 8,4W black	KR982102
up outdoor square 18W white	KR982121
up outdoor square 18W black	KR982122
up outdoor square 18W wallwasher white	KR982181
up outdoor square 18W wallwasher black	KR982182
up outdoor circular 8,4W white	KR982601
up outdoor circular 8,4W black	KR982602
up outdoor circular 18W white	KR982621
up outdoor circular 18W black	KR982622
up outdoor circular 18W wallwasher white	KR982681
up outdoor circular 18W wallwasher black	KR982682

name	reference
up in line outdoor square 8,4W white	KR982301
up in line outdoor square 8,4W black	KR982302
up in line outdoor square 18W white	KR982321
up in line outdoor square 18W black	KR982322
up in line outdoor square 18W wallwasher white	KR982381
up in line outdoor circular 18W wallwasher black	KR982382
up in line outdoor circular 8,4W white	KR982801
up in line outdoor circular 8,4W black	KR982802
up in line outdoor circular 18W white	KR982821
up in line outdoor circular 18W black	KR982822
up in line outdoor circular 18W wallwasher white	KR982881
up in line outdoor circular 18W wallwasher black	KR982882


NOTE:

ONLY use these supporting brackets in case the up (in line) outdoor square/circular is NOT used in combination with a matchbox.



1 references

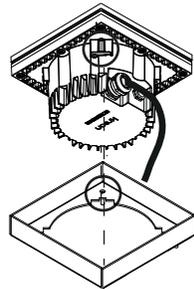


align the two springs on the product with the cut-outs in the frame

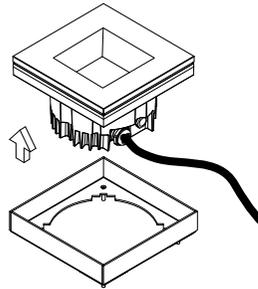


click the frame onto the product

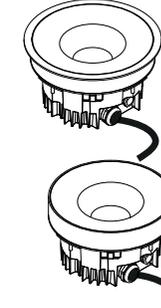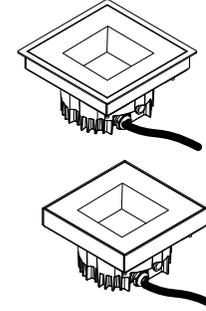

2 installation

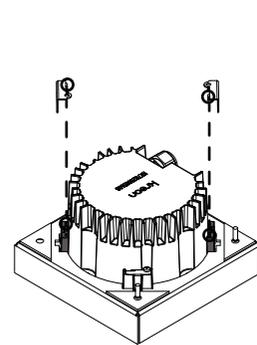

align the flanges of the two delivered brackets with the cavities in the free details at the back of the product

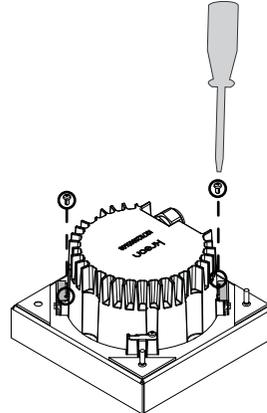

fix the brackets with the two delivered screws

complete the installation of the product according to manual KR8820001833 or KR8820001834