

IMPORTANT SAFETY INSTRUCTIONS - SAVE THESE INSTRUCTIONS

Installation instructions for Mini Rokko and Mini Square Rokko. Model numbers: ku94301_, ku94302_, ku(x)94311_, ku94312_, ku(x)94331_, ku94332_

! WARNING: READ AND UNDERSTAND ALL INSTRUCTIONS BEFORE STARTING INSTALLATION. SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE

! RISK OF FIRE! - RISK OF SHOCK!

- INSTRUCTIONS PERTAINING TO A RISK OF FIRE OR INJURY TO PERSONS
- THIS LUMINAIRE MUST BE INSTALLED TO CONFIRM WITH NEC AND ALL LOCAL ELECTRICAL &

BUILDING CODES & PRACTICES BY A PERSON FAMILIAR WITH THE CONSTRUCTION AND OPERATION OF THE PRODUCT AND THE HAZARDS INVOLVED. TO ASSURE FULL COMPLIANCE WITH LOCAL CODES AND REGULATIONS, CONSULT WITH YOUR LOCAL ELECTRICAL INSPECTOR BEFORE INSTALLATION.

- DISCONNECT POWERSUPPLY BEFORE INSTALLING OR SERVICING
- LUMINAIRE MAY **NOT** COME IN CONTACT WITH INSULATION. ANY INSULATION IS A MINIMUM OF 3" AWAY FROM HOUSING.
- NON IC TYPE LUMINAIRE
- WALL MOUNT ONLY
- SUITABLE FOR MOUNTING WITHIN

1.2m OF THE GROUND
- BLINKING LIGHT OF THIS THERMALLY PROTECTED LUMINAIRE MAY INDICATE OVER-HEATING
- SUITABLE FOR WET LOCATIONS
- SUPPLY CONDUCTORS (POWER WIRES) CONNECTING THE LUMINAIRE MUST BE RATED 90°C

WARNING - to reduce the risk of FIRE OR INJURY:
- turn off power and allow to cool before replacing lamp
- lamp gets HOT quickly!
- do not touch hot lens, guard, reflector or enclosure
- keep lamp away from materials that may burn
- in case of tungsten halogen lamptype: do not touch lamp at any time; use soft

cloth; oil from skin may damage the lamp
- do not operate the luminaire with a missing or damaged shield
- to reduce the risk of fire and overheating, make sure all connections are tight

This luminaire can only be used with Kreon accessories.

This installation manual might not cover all details or variations. When additional information is required, please contact your local representative, or one of the Kreon offices.

1 notifications

Notice de montage pour Mini Rokko et Mini Square Rokko. ku94301_, ku94302_, ku(x)94311_, ku94312_, ku(x)94331_, ku94332_

! ATTENTION: LIRE ET COMPRENDRE TOUTES LES INSTRUCTIONS AVANT L'INSTALLATION CONSERVER CES INSTRUCTIONS POUR DE FUTURES REFERENCES

! RISQUE D'INCENDIE! RISQUE DE CHOC!

- INSTRUCTIONS RELATIVES À UN RISQUE D'INCENDIE OU DE BLESSURE
- CE PRODUIT DOIT ÊTRE INSTALLÉ SELON LE CODE D'INSTALLATION PERTINENT, PAR UNE PERSONNE QUI CONNAÎT BIEN LE PRODUIT ET SON FONCTIONNEMENT AINSI QUE LES RISQUES INHÉRENTS
- CONSULTER UN ÉLECTRICIEN

QUALIFIER POUR VOUS ASSURER QUE LES CONDUCTEURS DE LA DERIVATION SONT ADEQUATS
- COUPER L'ALIMENTATION AVANT L'ENTRETIEN
- SI L'AMPOULE DE CE LUMINAIRE A PROTECTION THERMIQUE CLIGNOTE, CELA PEUT SIGNIFIER UNE SURCHAUFFE
- NE PAS METTRE L'ISOLANT À MOINS DE 3" DE TOUTE PARTIE DU LUMINAIRE
- TYPE NON IC
- INSTALLATION MURALE SEULEMENT
- PEUT ÊTRE INSTALLÉ À MOINS DE 1.2m DU SOL
- CONVIENT AUX EMPLACEMENT MOUILLÉS
- LES FILS D'ALIMENTATION DOIVENT CONVENIR POUR 90°C


ALERTE - pour réduire le risque D'INCENDIE OU DE BLESSURE:
- coupez l'alimentation électrique et laissez refroidir avant de remplacer l'ampoule
- la lampe chauffe rapidement!
- ne touchez pas l'objectif à chaud, la garde, le réflecteur ou une enceinte
- gardez le luminaire loin de matériaux qui peut brûler
- en cas de halogènes incandescence: ne jamais touchez l'ampoule; utilisez un chiffon doux; l'huile de la peau peut endommager l'ampoule
- luminaires équipés avec un verre de sécurité doivent être opérés d'un verre de sécurité complet et en place

Le luminaire ne peut être utilisé qu'avec des accessoires de Kreon


Cette notice de montage ne couvre pas tous les détails ou les variations. Pour des informations supplémentaires veuillez contacter votre représentant local ou un des bureaux Kreon.

1 notifications

technics

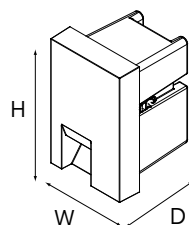

mini rokko

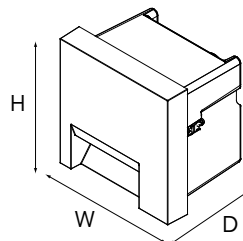

mini square rokko

Lamptype

Reference

Input

H


W

D


Mini Rokko T3 (gear excl.)	ku94301_	12V	5 1/2"	3 1/2"	4"
Mini Rokko T3 (gear incl.)	ku94311_ / kx94311_	120V / 277V	5 1/2"	3 1/2"	4"
Mini Rokko LED (gear excl.)	ku94302_	350mA constant	5 1/2"	3 1/2"	4"
Mini Rokko LED (gear excl.)	ku94302_-B	700mA constant	5 1/2"	3 1/2"	4"
Mini Rokko LED (gear incl.)	ku94312_	120V	5 1/2"	3 1/2"	4"
Mini Square Rokko T4 (gear incl.)	ku94331_ / kx94331_	120V / 277V	5 1/2"	5 1/2"	4 1/8"
Mini Square Rokko LED (gear incl.)	ku94332_	120V	5 1/2"	5 1/2"	4 1/8"

2 dimensions


3 installation in hollow (stud) wall

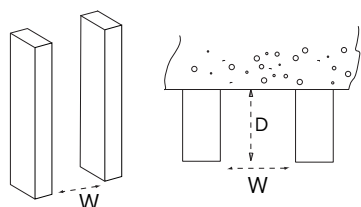


install a wooden or metal structure:
mini rokko: W = 3 3/4" D = min. 4"
mini square rokko: W = 5 3/4" D = min. 4"

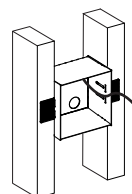

fix metal enclosure onto the construction
and provide mains through the top gap
min. dia. 0.23" (5.8mm)
to max. dia. 0.395" (10.0mm)

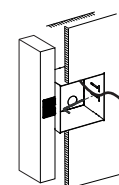


install the wall and use hexagonal key to
loosen screws, align the enclosure
with the wall and fix screws firmly

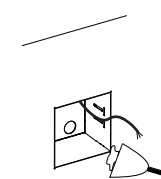


finish the wall


4 installation

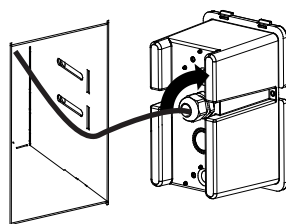


pull wire through liquid tight cord grip
and tighten screw very well

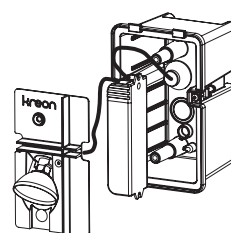

make correct connection
see wiring diagrams

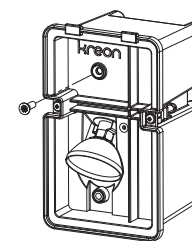


place the gear back in the base
and fix screening cap with one screw

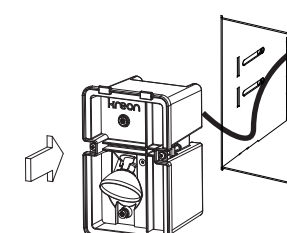


place the luminaire in
the enclosure


5 installation

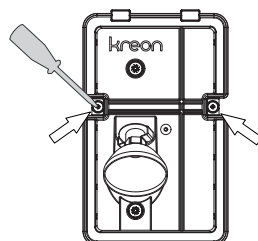


fasten screws until the luminaire is fixed

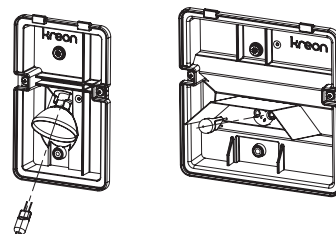

insert lamp (if needed)

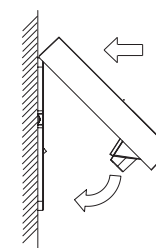


attach cover to the hinge
and rotate while closing

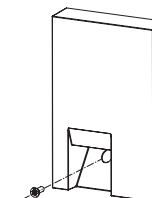




In case of Mini Rokko, fix cover with
supplied screw. To assure watertightness
do not use other screw!

technics

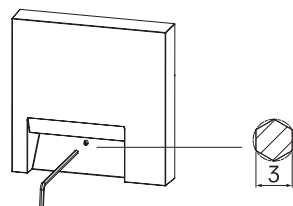

6 installation

In case of Mini Square Rokko fix cover with the supplied allen key.

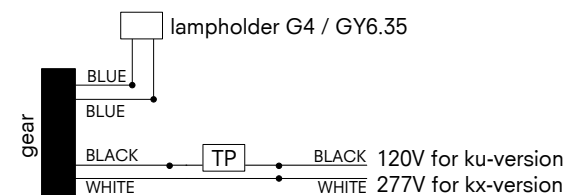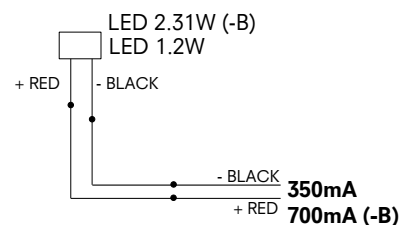
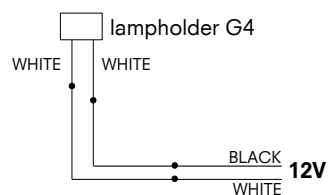


7 wiring diagrams

wiring diagram ku94301_

wiring diagram ku94302_



wiring diagram ku(x)94311_ ku(x)94331_

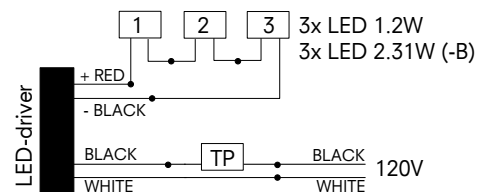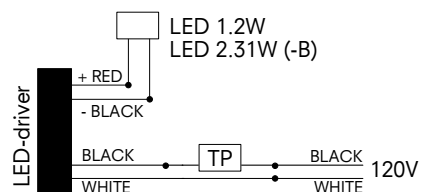

8 wiring diagrams

wiring diagram ku94312_

wiring diagram ku94332_

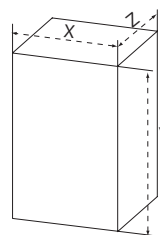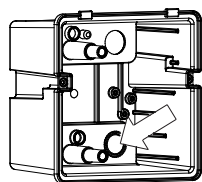

9 options + pictures

In case of Mini Sq. Rokko a cascade connection is possible. Remove knock-out and use the optional liquid tight fitting kr700193

In case of concrete wall use concrete pouring mould KU743004 (Mini rokko) or KU743304 (Mini Sq rokko).