



technics

In case of precast concrete panels, gear inclusive.

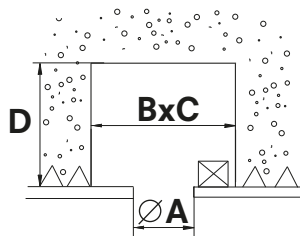


In case of finished concrete ceiling, gear exclusive.


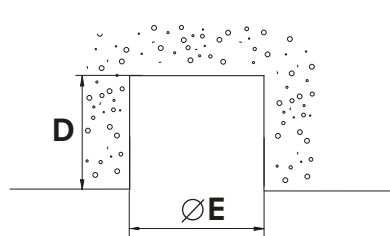


Name	Reference	Lamptype	Ø A	B	C	D	Ø E
Plasterkit concrete Aplis 120	KR737612	LED directional	252	305	305	200	305
		LED low dir	252	400	400	140	305
Plasterkit concrete down 60	KR747372	LED	130	265	265	150	265
In Case of TW driver:			130	230	230	200	230




1 cut out

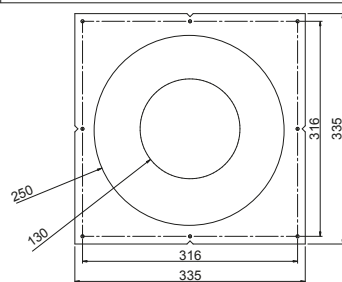

Aplis 120

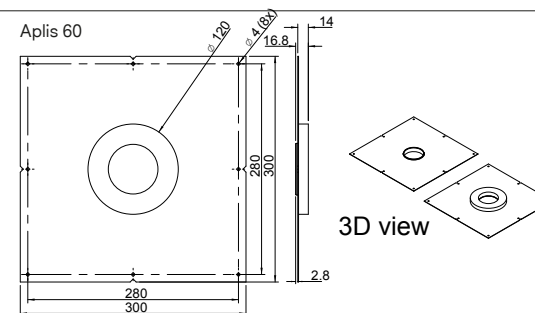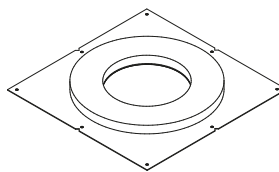

2 dimensions

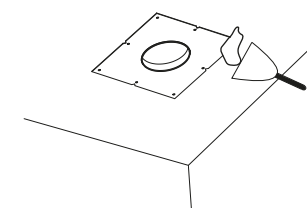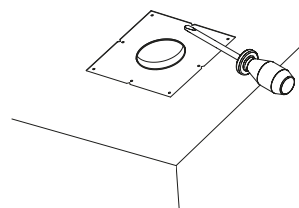
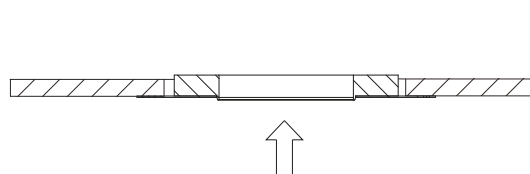


3 installation

Put the plasterkit through the hole.

Fix the plasterkit with screws.

Fill around perimeter of plasterkit using suitable filler and plaster to hide screws and plasterkit.

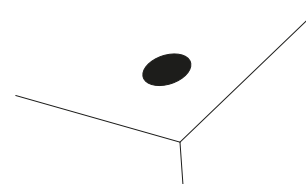

4 installation

Minimum filler distance, spread out until zero.

For installing aplis, see the corresponding installation manual.

kreon nv

Industrieweg Noord 1152
3660 Oudsbergen
Belgium

Tel + 32 89 81 97 80
Fax + 32 89 81 97 90

www.kreon.com
mailbox@kreon.be

revision date: 10/09/20
KR8376122033

Sheet 1/1