

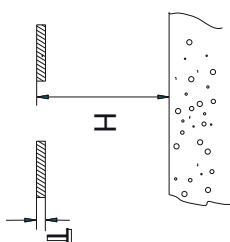





## technics

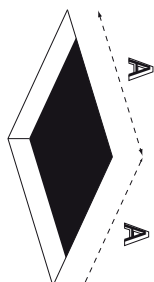



## 1 | cut out

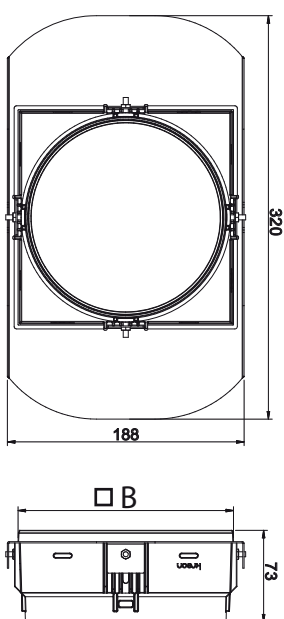

## 2 | dimensions

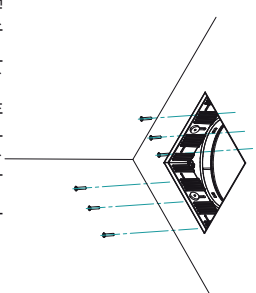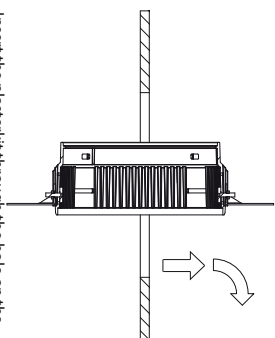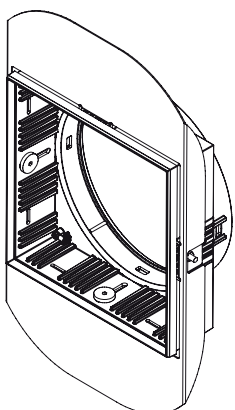

## 3 | installation

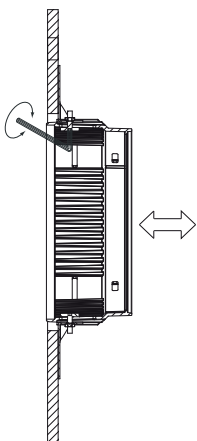

## 4 | installation

Align the box with the plasterboard using the thumb screw.  
Fix these screws with a hexagon screw key.

Fill around perimeter of plasterkit using suitable filler and plaster  
to hide screws and plasterkit.

Name	Reference	□ A	H min	T min-T max
Plasterkit box without shadow gap	KR717214	186		
Plasterkit box with shadow gap	KR717218	186		
In case of QT12-ax type	KR917813	195: <del>200</del>	200: <del>205</del>	
In case of QT12-ax Wall Washer type	KR917413	170: <del>175</del>	175: <del>180</del>	
In case of HIT-TC type	KR917883	225: <del>230</del>	230: <del>235</del>	
In case of HIT-TC Wall Washer type	KR917483	200: <del>205</del>	205: <del>210</del>	
In case of QR-LP111 type	KR917823	178: <del>183</del>	183: <del>188</del>	
In case of HIR-CE111 type	KR917853	203: <del>208</del>	208: <del>213</del>	
In case of Audio	KR91789x	155		
Plasterboard thickness				9-26

Name	Reference	□ B
Plasterkit box without shadow gap	KR717214	171
Plasterkit box with shadow gap	KR717218	177

## kreon nv

Industrieweg Noord 1152

3660 Opglabbeek

Belgium

Tel + 32 89 81 97 80

Fax + 32 89 81 97 90

www.kreon.com

mailbox@kreon.be

revision date: 16/02/15

KR8170001787