


kreon installation manual

technics & dimensions



name


recessed suspension kit oran/holon40 pendant

reference


KR791000

Please make sure the main voltage is disconnected before proceeding! ⚡


Remarks

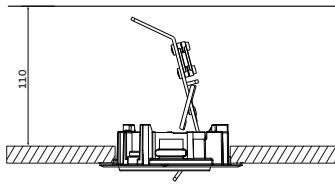

Minimum height for bracket

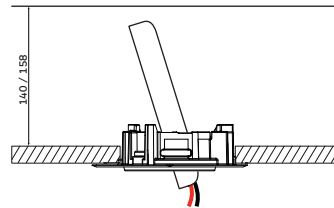


KR762700 on/off driver, minimum height of 158mm
KR762902 1-10V driver, minimum height of 140mm

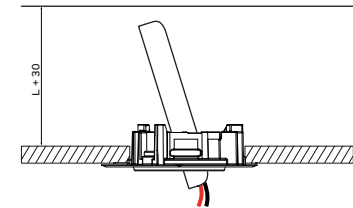


In case of other gear, length gear + 30mm
Make sure gear fits through plasterkit (max 35x19mm)


installation

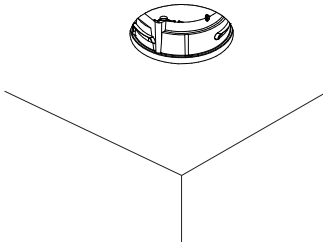

First install a plasterkit:
See installation manual KR8170001755 or KR8170001758.

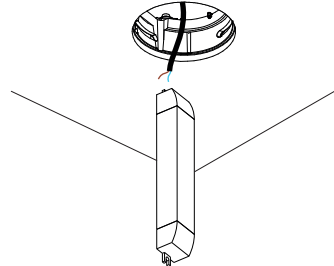


In case of driver on ceiling:
Connect the main supply to the driver and push the driver perpendicular through the plasterkit

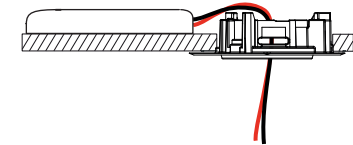


Place the driver on the ceiling


installation

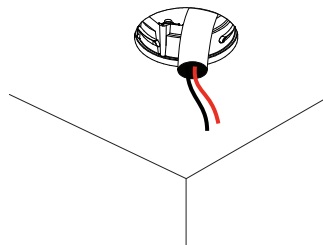

In case of driver at distance:
Make sure that a cable is coming from the driver out of the ceiling through the plasterkit

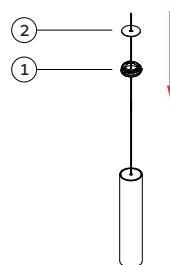


IMPORTANT: Do not forget to slide louver and ceiling cover over the cable

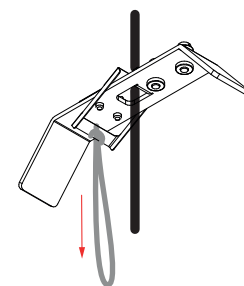


Push the suspension cable through the opening in the bracket while pulling the cord

kreon installation manual


installation

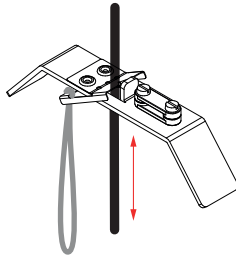

Push/pull the cable to adjust suspension height

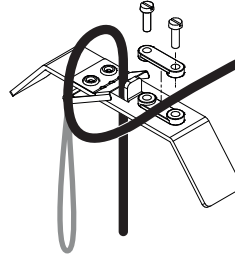


Loop the cable through the cable clamps and screw the clamps together

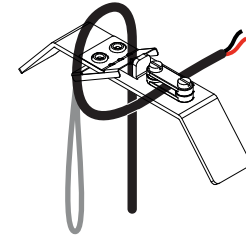


Cut the cable after the cable clamp and strip the cable


installation

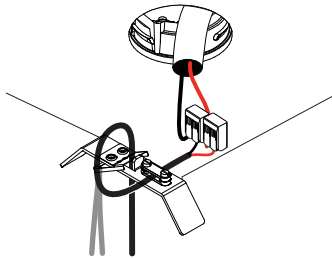

Connect cables by using connectors
Mind the polarity (+ is red, - is black)

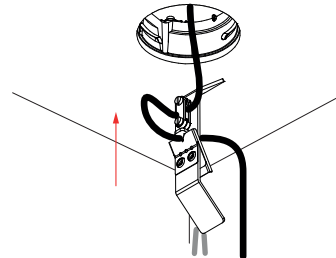


Put cables, connectors and the bracket perpendicular through the plasterkit

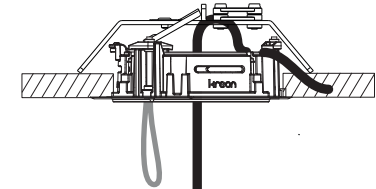


Place bracket on the ceiling and pull the cord through the plasterkit

installation

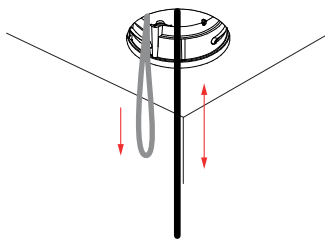

Adjust suspension height while pulling the cord
Push cord behind the plasterkit

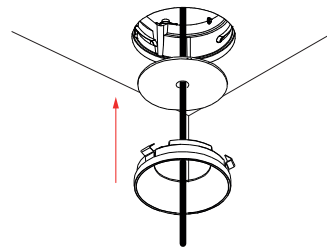

Insert cover and louvre in the plasterkit
Align the three springs with the slots
and click the louvre in the plasterkit

